



UP/DOWN/STOP/ CONTROLLER

INFORMATION SHEET

OVERVIEW

The master up/down/stop controller is wired directly into the door's Genesys electrical box. This controller can be positioned on either side of the door and is mounted to the building. The controller comes prewired from factory. Our controller meets both Canadian and American electrical standards and is a NEMA 4/12 (sealed enclosure, dust-proof), CSA/UL certified controller.

Our up/down/stop controller allows the user to push the button and walk away while the door cycles, compared to other competitor door systems that require users to press and hold the button during the entire opening/closing sequence.

TECHNICAL SPECS

Certification: NEMA 4/12, CSA/UL

WARRANTY

The door is free of manufacturing defects in material and workmanship for a period of two years. The door will not warp, crack, or buckle under normal intended use as a door.



FREQUENTLY ASKED QUESTIONS

Is the wiring included with the Up/Down/Stop Controller?

Enough wiring is provided to attach the controller to either side of the building.

Do I need an electrician to install the Up/Down/Stop Controller?

The controller is wired directly into the door's Genesys Electrical Box and an electrician is required to complete the wiring.

