
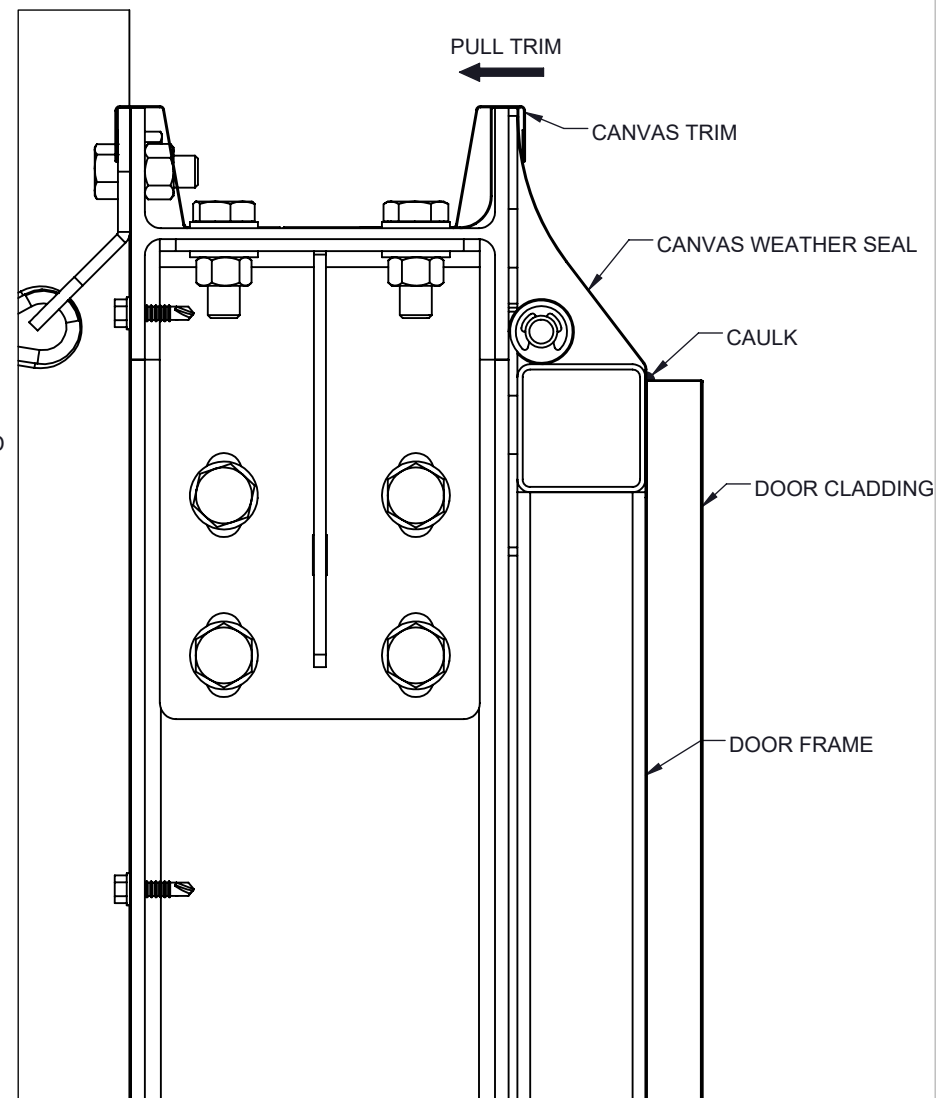



TOP WEATHER SEAL INSTALLATION DIAGRAM ON SELF SUPPORTING HEADER

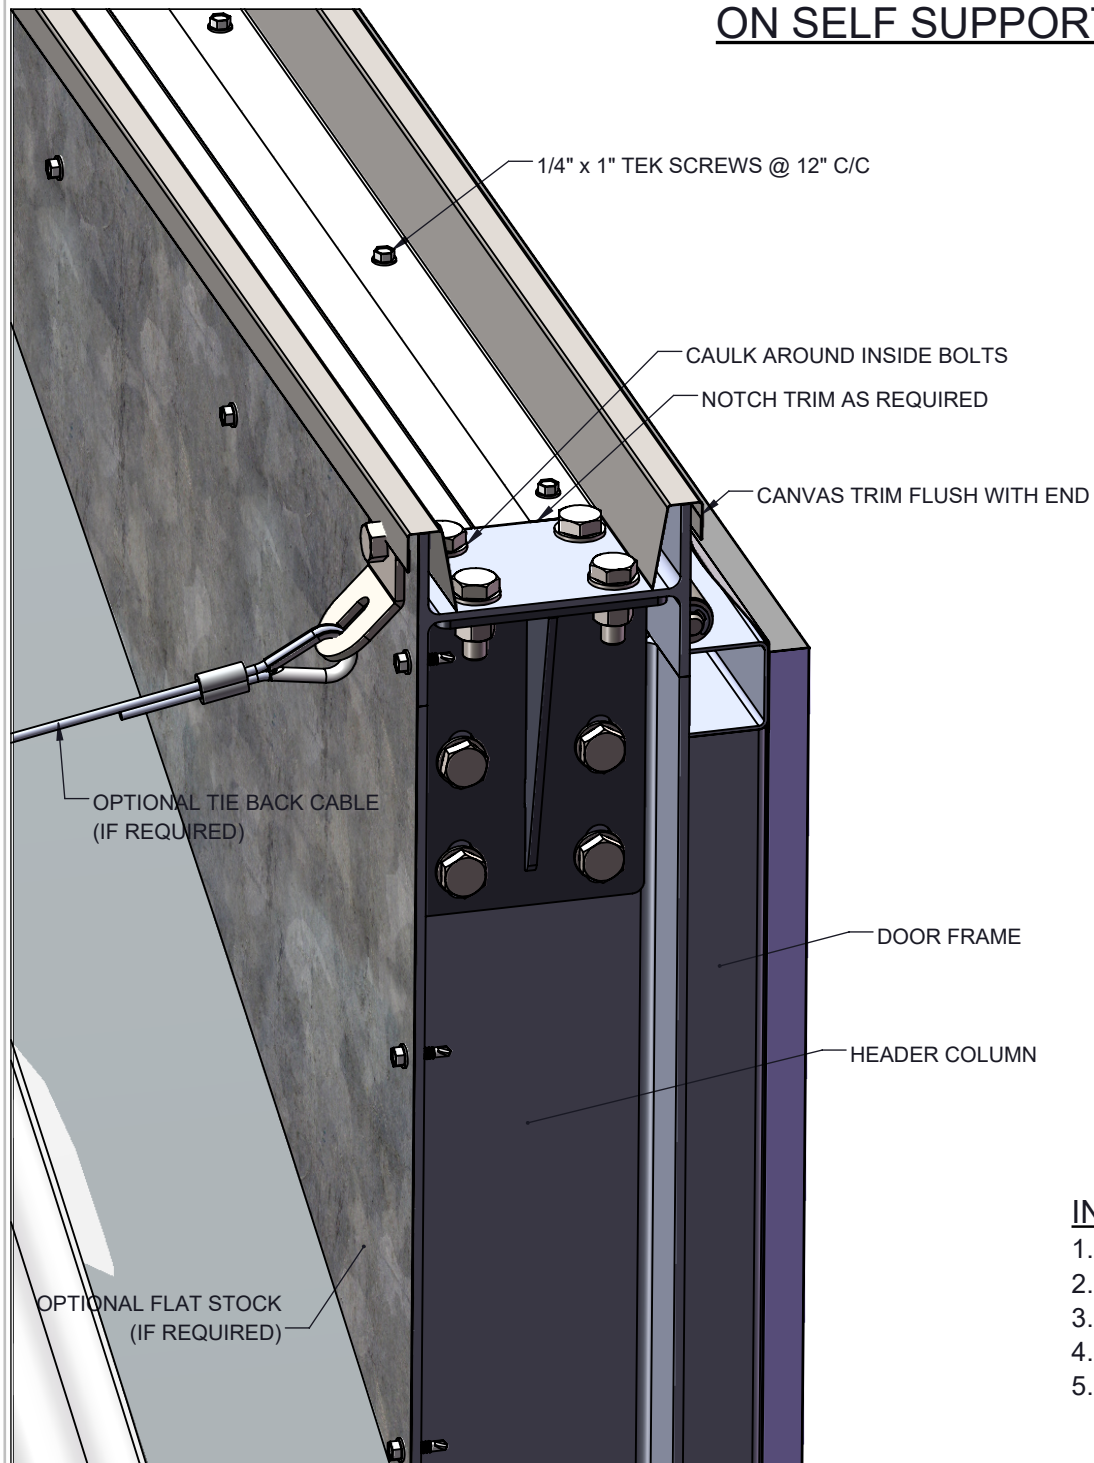

INSTALLATION INSTRUCTIONS

1. FASTEN CANVAS WEATHER SEAL TO DOOR FRAME
2. PULL CANVAS OVER HEADER FLANGE
3. INSERT TRIM OVER CANVAS
4. ADJUST TRIM AS NEEDED
5. FASTEN TRIM WITH TEK SCREWS

TIE-BACK CABLE INSTALLATION DIAGRAM ON SELF SUPPORTING HEADER

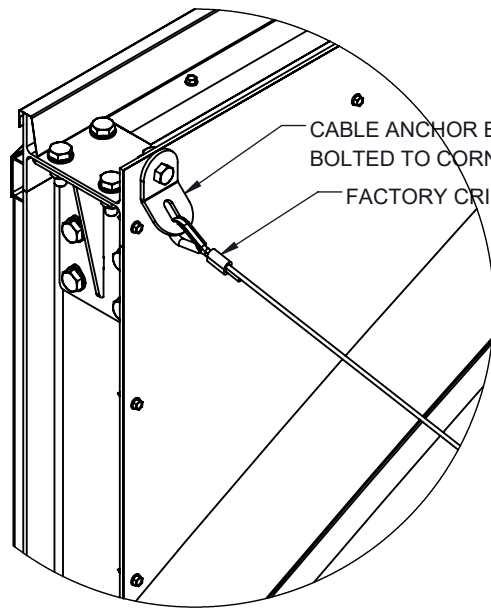


CABLE ANCHOR BRACKET
BOLTED TO CORNER OF HEADER

FACTORY CRIMPED CABLE

DETAIL A

OPTIONAL TIE BACK CABLE
(IF REQUIRED)

OPTIONAL TIE BACK ANGLE
(IF REQUIRED)

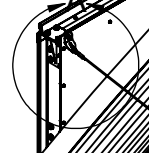

TURNBUCKLE HOOKED
INTO TIE BACK ANGLE
(TIGHTEN AS REQUIRED)

CABLE CLAMP

TIE BACK ANGLE FASTENED
TO STRUCTURE

DETAIL B
SCALE 1 : 10